

USER GUIDE AND INSTALLATION MANUAL TEMPERATURE SWITCH



ZFSWF - Standard

1 Install Temperature Switch

- A. Find suitable location for sensor i.e. Engine Block Intake manifold or Raditor, etc.
- B. Connect wire from temp sensor to terminal 85 of the relay
- C. Connect terminals 30 and 85 of the Relay to switched 12v+ power (ACC, IGN) using 12 gauge wire.
- D. Connect terminal 87 to fan using 12 gauge wire.

2 OPTIONAL Wiring Temperature Switch with Manual Switch

- A. Connect the Power Post of the manual switch to Terminal 86 of the Relay.
- B. Connect the Ground Post to a chassis ground.

WIRING DIAGRAM

