

Bearing position info

Bearing part #	Position in engine block
CH-4-1	1- front of block
CH-4-2	2 & 5
CH-4-3	3 & 4

A cam bearing installation tool is required for proper installation of bearings.